

Child Safety Device Fitting Instructions

Child Safety Options for control cords

Blinds Supermarket have a number of child safety devices available to help keep control cords and chains out of reach of children. Use the table below to work out which device is most appropriate.

	Cleat	Hook	Control Anchor
Vertical		✓	✓
Venetians	✓		✓ (50mm)
Wood Venetians	✓		
Rollers		✓	
Romans	✓ (Standard)	✓ (Deluxe)	
Pleated	✓		
Woodweave	✓		

Child Safety Device fitting instructions

Cleat



Screw the cleat to an adjacent wall at the required height. Wind the cord around the cleat in a secure figure-of-eight.



Cleat

Hook

Screw the hook to an adjacent wall at the height of the bottom of the control cord. Secure the cord into the hook, ensuring that the cord remains taut.

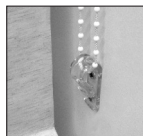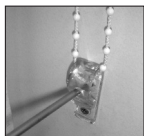

Hook

Control Anchor

Remove the cover. With the flat edge at the top, screw the backplate to an adjacent wall, at the height of the bottom of the control cord. Slip the cord and the chain over the pulley hook. Ensure that they are both taut. Shorten the chain accordingly if required. To shorten the chain, open the chain connector (it opens like a hinged door). Hold the chain into position around the pulley pin and cut the chain to the correct length so that it matches the length of the cord. Place the end balls of the chain into each side of the chain connector and close the 'door'. Ensure the connector doesn't end up inside the Child Safety device. Replace the cover and check that the controls still work.



Control Anchor

If you would like more information or help, please call **0845 604 9610**
8.30am - 6.00pm Monday to Friday and 9.00am - 1.00pm Saturday